

Quick Start Guide

PM84



v1.0, Nov 2023

Copyright © 2023 Point Mobile Co., Ltd. All rights reserved.


Point Mobile Co., Ltd. is the designer and manufacturer of mobile handheld devices.

The Point Mobile logo is a registered trademark and symbol of Point Mobile Co., Ltd.

Features and specifications are subject to change without prior notice.




Device Parts

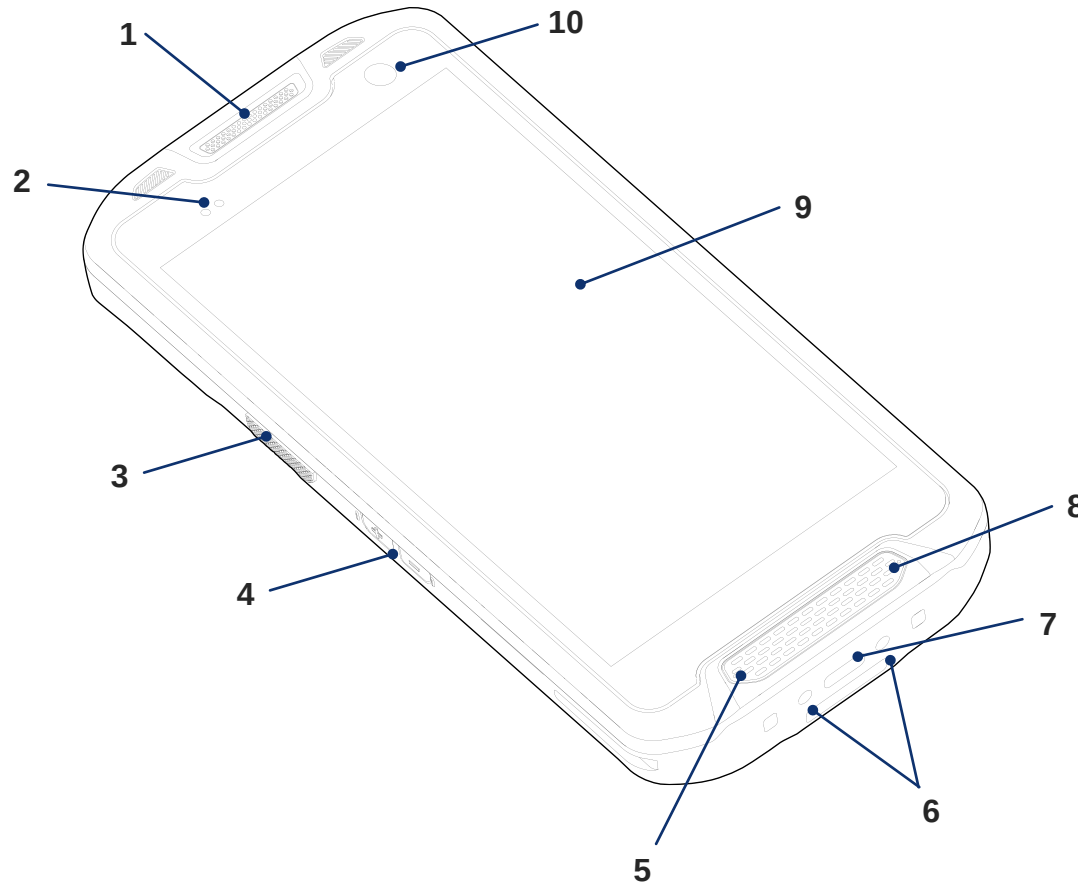

1. Receiver
2. LED indicator
3. Scan button (Left)
4. Volume buttons
5. Microphone
6. I/O connector for cradle
7. USB connector
8. Speaker
9. Touch screen
10. Front camera

Device Parts

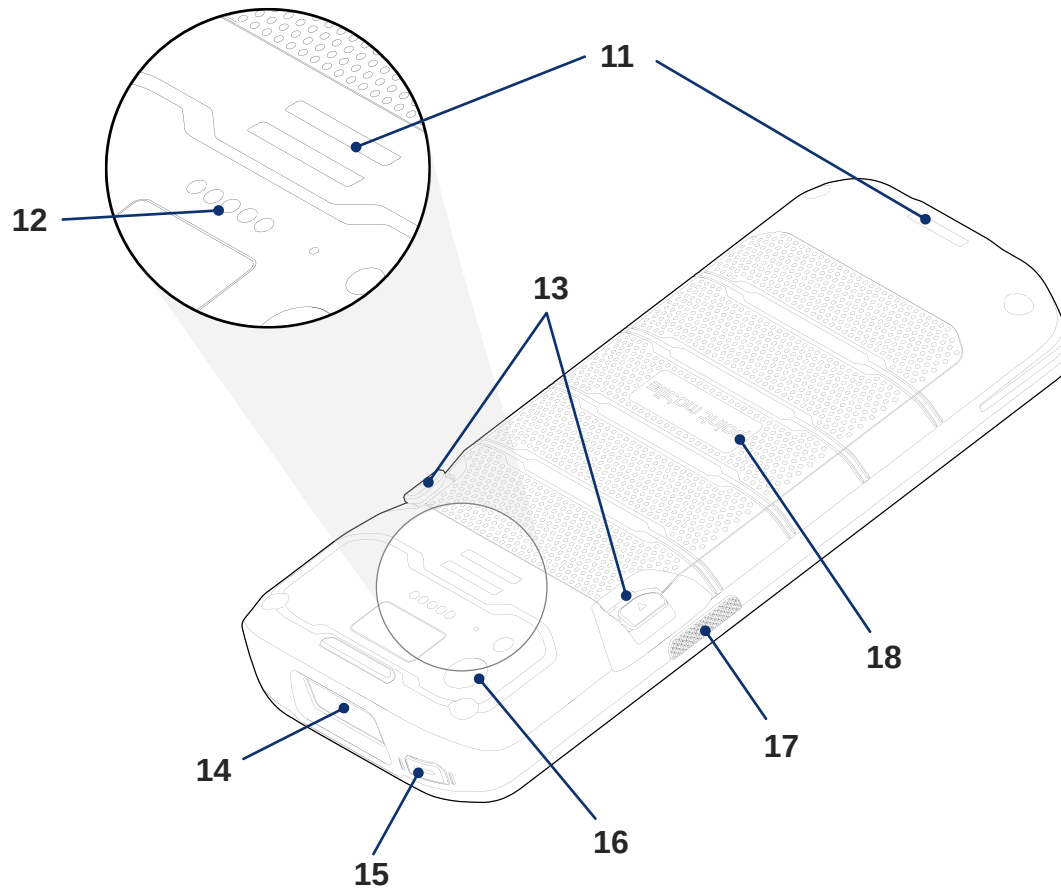

- 11. Hand strap holes
- 12. Rear I/O connector
- 13. Battery release buttons
- 14. Scanner
- 15. Power button
- 16. Rear camera & Flashlight
- 17. Scan button (Right)
- 18. Battery

Product Standard Accessories



Battery pack



5V 2A power adapter



AC Plug



USB type C cable



Hand strap



LCD protection film


Battery Replacement

Insert Battery

1. Insert the battery from the bottom side (opposite side of the battery release buttons).
2. Push the battery down until it clicks.
Confirm that the battery release buttons are completely outward, and the bottom side is fully engaged.

Remove Battery

1. Hold the battery release buttons and press in.
2. While pressing the battery release buttons in, pull the battery up.

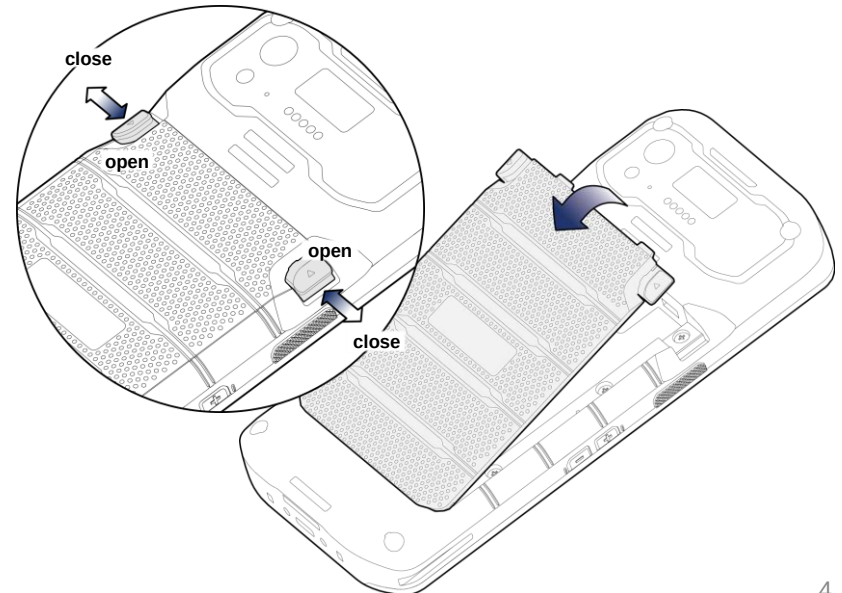


Supported Cards & Card Slot Cover

PM84 provides

- 1 microSD card slot
- 1 nano SIM card slot – LTE SKU only

Remove the battery, and open the card slot cover to find card slots.

You can use the handle on the bottom side of the cover to open.




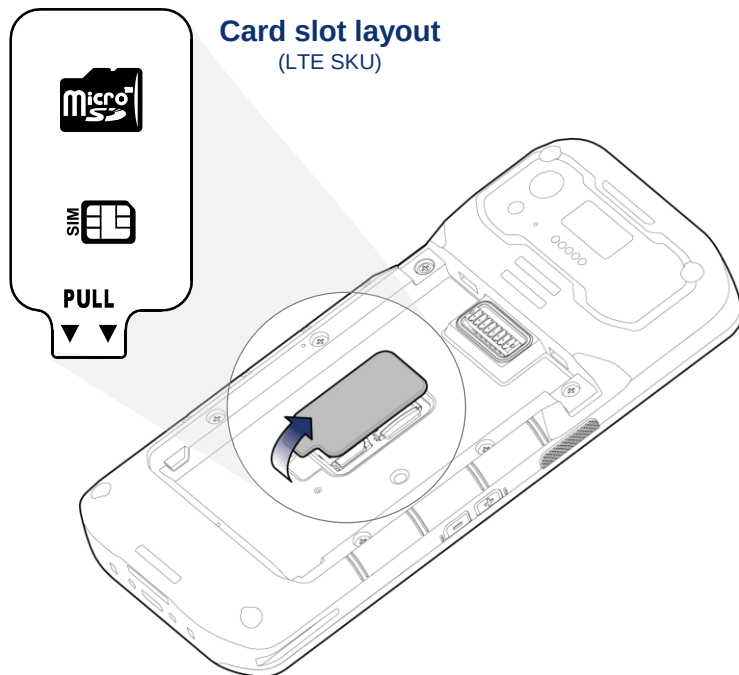


< Notice >


Do not throw away the cover. It affects device sealing performance against water, dust, etc.

Install SD / SIM Card

1. Gently slide the card holder left, and swing upwards to open the holder.
2. Put the proper card with the contacts facing down, close the holder, and gently slide it right to lock.

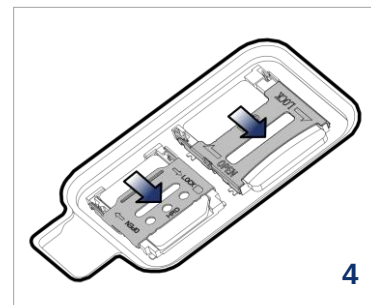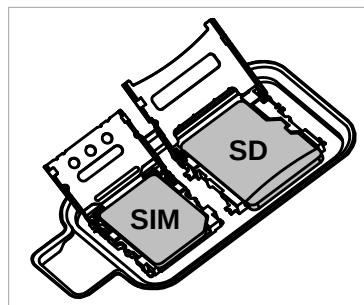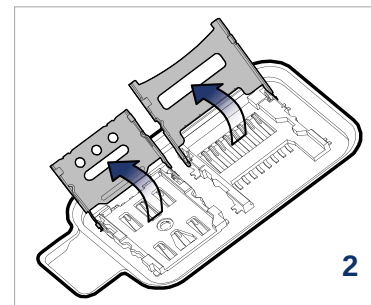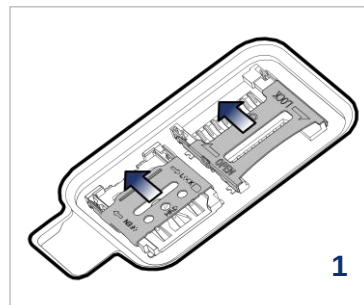

Turning on / off

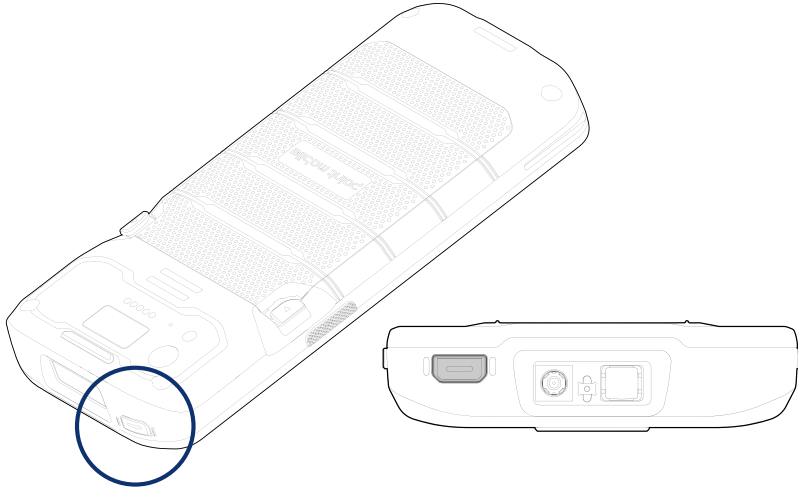

Turn on


Press and hold the power button on the top side of the PM84 until **SMART BEYOND RUGGED** logo displays on the screen.

Turn off

When the display is on, press and hold the power button until the power menu is shown.

Then, tap **Power off**.

Charging the Device

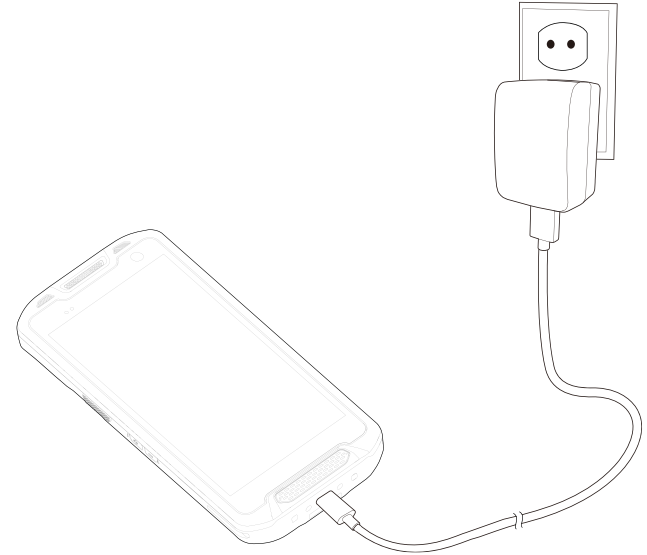


1. Assemble the AC plug, power adapter and USB cable.
 2. Connect the cable to the USB connector of PM84.
 3. Provide power by plugging the power adapter to the wall socket.
- PM84 can also be charged with charging cradle (sold separately).

< Caution >

1. *Always use an original power supply from Point Mobile. Other chargers and cables may damage the PM84.
The device warranty does not cover any damage caused by the usage of non-original power supplies.*
2. *Make sure the charger and cable is not wet.*
3. *Charge in temperatures from 0°C to 45°C.*

LED Indicator

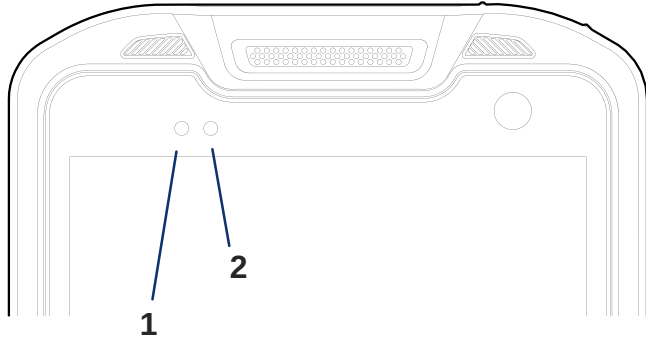


No	Indicator	Status	Indication
1	Power LED	Solid green	Device is fully charged
		Solid red	Charging the device / Battery is low
		Blinking red	Charging temperature is out of normal range / Battery is very low
		Alternately blinking red & green	Cannot recognize the battery
2	Notification LED	Blinking blue	Notification existing
		Red flash	Barcode reading failed
		Blue flash	Barcode reading success

Scan a Barcode

Scanner is disabled by default, so enable the scanner from **ScanSettings** first.

Check if the scanner icon  is placed on the Status bar. Then, press a scan button on the device to scan a barcode.

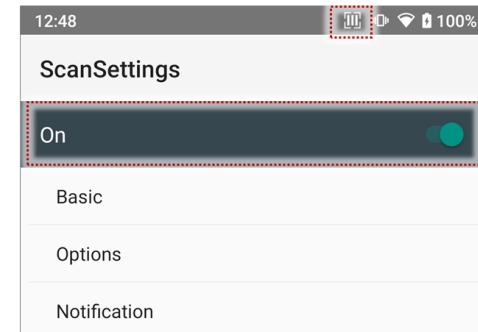

Center the cross-hair aimer or red dot aimer over the barcode. You can tilt the aimer slightly for a comfortable angle to scan.

